## This Datasheet for the

# **IC693ALG392**


## **High Density Analog Output (8 Channels)**

Provides the wiring diagrams and installation guidelines for this GE Series 90-30 module.

# PACSystems™ RX3i and Series 90-30

Series 90-30 Analog Output Module, Current/Voltage, 8 Channel, IC693ALG392 RX3i Analog Output Module, Current/Voltage, 8 Channel, IC694ALG392

GFK-2557 January 2009

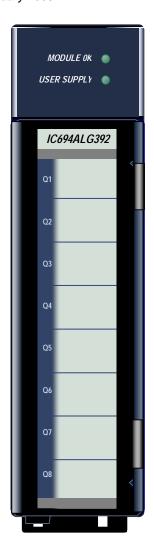

The **8–Channel Analog Current/Voltage Output** module; IC69\*ALG392, provides up to eight single-ended output channels with current loop outputs and/or voltage outputs. Each output channel can be set up using the configuration software for any of these ranges:

- 0 to +10 volts (unipolar)
- -10 to +10 volts (bipolar)
- 0 to 20 milliamps
- 4 to 20 milliamps

Each channel is capable of converting 15 to 16 bits (depending on the range selected) of binary data to an analog output. All eight channels are updated every 8 milliseconds.

In current modes, the module reports an Open Wire fault to the CPU for each channel. The module can go to a known last state when system power is interrupted. As long as external power is applied to the module, each output will maintain its last value or reset to zero, as configured.

This module can be installed in any I/O slot of an RX3i system.

#### Isolated +24 VDC Power

The module must receive its 24 VDC power from an external source, which must be connected directly to the module's terminal block.

## Specifications: ALG392

Number of Output Channels
Output Current Range
Output Voltage Range
Calibration

User Supply Voltage (nominal)
External Supply Voltage Range
Power Supply Rejection Ratio (PSRR)

Current Voltage

**External Power Supply Voltage Ripple** 

**Internal Supply Voltage** 

**Update Rate** 

Resolution:

Absolute Accuracy: \*
Current Mode

Voltage Mode

Maximum Compliance Voltage User Load (current mode)

Output Load Capacitance (current mode)
Output Load Inductance (current mode)

Output Loading (voltage mode)
Output load Capacitance

Isolation, Field to Backplane (optical) and to

frame ground

**Power Consumption** 

1 to 8 selectable, single—ended 4 to 20 mA and 0 to 20 mA 0 to 10 V and -10 V to +10 V

Factory calibrated to .625  $\mu A$  for 0 to 20 mA; 0.5  $\mu A$  for 4 to

20 mA; and .3125 mV for voltage (per count) +24 VDC, from user supplied voltage source

20 VDC to 30 VDC

5 μA/V (typical), 10 μA/V (maximum) 25 mV/V (typical), 50 mV/V (maximum)

10% (maximum)

+5 VDC from PLC backplane

8 milliseconds (approximate, all eight channels) Determined by I/O scan time, application dependent.

4 to 20mA:  $0.5 \mu A$  (1 LSB =  $0.5 \mu A$ ) 0 to 20mA:  $0.625 \mu A$  (1 LSB =  $0.625 \mu A$ ) 0 to 10V: 0.3125 mV (1 LSB = 0.3125 mV) -10 to +10V: 0.3125 mV (1 LSB = 0.3125 mV)

+/-0.1% of full scale @ 25°C (77°F), typical +/-0.25% of full scale @ 25°C (77°F), maximum +/-0.5% of full scale over operating temperature range (maximum)

maximum) / 0.25% of full scale @ 2

+/-0.25% of full scale @ 25°C (77°F), typical +/-0.5% of full scale @ 25°C (77°F), maximum +/-1.0% of full scale over operating temperature range

(maximum)

 $V_{USER}$  –3 V (minimum) to  $V_{USER}$  (maximum)

0 to 850  $\Omega$  (minimum at V<sub>USER</sub> = 20 V, maximum 1350  $\Omega$  at V<sub>USER</sub> = 30 V) (Load less than 800  $\Omega$  is temperature

dependent.)

2000 pF (maximum)

1 H

5 mA (2 K Ohms minimum resistance)

(1 µF maximum capacitance)

250 VAC continuous; 1500 VAC for 1 minute

110 mA from +5 VDC PLC backplane supply

315 mA from +24 VDC user supply

Refer to the *PACSystems RX3i Systems Manual*, GFK-2314, for product standards and general specifications. In order to meet the levels for RF Susceptibility specified in Appendix A of the PACSystems RX3i System Manual, GFK-2314, when this module is present, the system must be mounted in a metal enclosure.

■ In the presence of severe RF interference, accuracy may be degraded to ±1% FS for current outputs and ±3% FS for voltage outputs.

## Compatibility

Series 90-30 PLC CPU: for CPU firmware versions 3.3 to 4.6, the module must be configured for 16 %I inputs or a Loss of Module Fault will occur. CPU firmware must be version 5.0 or later to configure the module for 8% I inputs.

Hand-Held Programmer: Only Series 90-30 modules IC693ALG392 version C or earlier support the Series 90-30 Hand-held Programmer. Series 90-30 modules IC693ALG392 version BD or later and RX3i modules IC694ALG392 (all versions) cannot be used with a Hand-held Programmer.

# Release History

Version	Date	Description
IC693ALG392-BD IC694ALG392-BB	January 2009	Updated processor and D/A converter.  IC693ALG392-BB or later is not compatible with a Series 90-30 Hand-held Programmer.
IC693ALG392-C	February 2005	ATEX approval for Group 2, category 3 applications.
IC694ALG392-AA	July 2004	Initial product release
IC693ALG392-B	October 1995	CE certification
IC693ALG392-A	n/a	Initial product release

## **New Features**


When used in a PACSystems RX3i, modules IC693ALG392 version BD or later and IC694ALG392 version BB or later can be field-upgraded using Winloader.

Proficy Machine Edition displays the module firmware revision level for modules IC693ALG392 version BD or later and IC694ALG392 version BB or later in PACSystems RX3i targets.

# **Derating Curves: ALG392**


For maximum performance and module life, the module should be operated at maximum load resistance to offload heat. Module thermal deratings depend on the voltage level and the use of current and voltage outputs. The first two charts below show the maximum ambient temperature for current-only modules at 30 VDC and at 26.5 VDC.

## **Current Outputs Only**

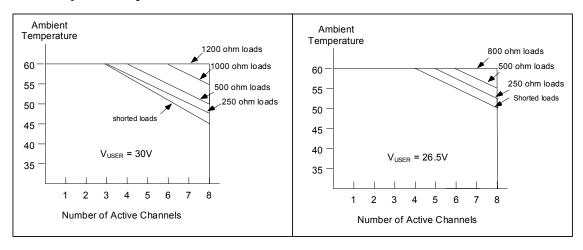

## Mixed Current and Voltage Outputs

In the example shown below, voltage channels have 2 K Ohm loads and current channels have shorted loads. To determine the maximum operating temperature for mixed current and voltage outputs, select the line in the chart below that corresponds to the number of voltage channels being used. For example, a module uses 2 voltage channels and 3 current channels. The total channels are 5, and the maximum operating temperature is approximately 52.5°C:

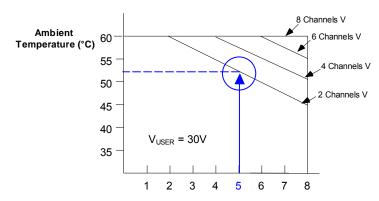

**Active Channels Current and Voltage Mixed** 


## Current and Voltage Ranges and Resolution


In the 4 to 20mA range, the module scans output data from the PLC so that 4mA corresponds to a count of 0, and 20mA corresponds to a count of 32000. In the 0 to 20mA range, user data is scaled so that 0 mA corresponds to a count of 0 and 20mA corresponds to 32000. In 0 to 20mA mode, a value up to 32767 provides a maximum output of approximately 20.5mA. In current mode, the module also reports an open loop fault to the PLC.


For voltage operation in the default unipolar mode (0 to +10 volts), data is scaled so that 0 volts corresponds to a count of 0 and +10 volts corresponds to a count of 32000. In this mode, a value up to 32767 creates an overrange output of approximately 10.24 volts.

In the -10 to +10 volt range, data is scaled so that -10 volts corresponds to a count of -32000 and +10 volts corresponds to a count of +32000. In this range, output values from -32767 to +32767 result in an overrange of approximately -10.24 volts to +10.24 volts.

Scaling for both current and voltage ranges is shown below.

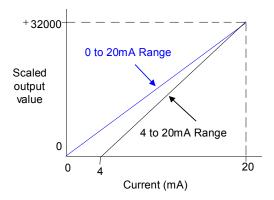

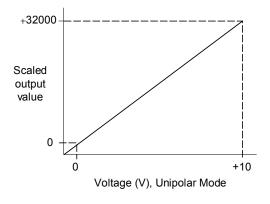

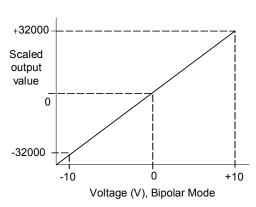


The resolution per bit depends on the channel's configured range:

4 to 20 mA:	0.5 μΑ
0 to 20 mA:	0.625 μΑ
0 to 10 V:	0.3125 mV
-10 to +10 V:	0.3125 mV

# Field Wiring: ALG392

Terminal	Signal Definition	
1	User Supplied +24 VDC Input	
2	Channel 1 Voltage Output	
3	Channel 1 Current Output	
4	Channel 2 Voltage Output	
5	Channel 2 Current output	
6	Channel 3 Voltage Output	
7	Channel 3 Current output	
8	Channel 4 Voltage Output	
9	Channel 4 Current output	
10	Channel 5 Voltage Output	
11	Channel 5 Current output	
12	Channel 6 Voltage Output	
13	Channel 6 Current output	
14	Channel 7 Voltage Output	
15	Channel 7 Current output	
16	Channel 8 Voltage Output	
17	Channel 8 Current output	
18	Voltage Common	
19	Current Common/User +24 VDC Return	
20	Frame ground connection for cable shields	

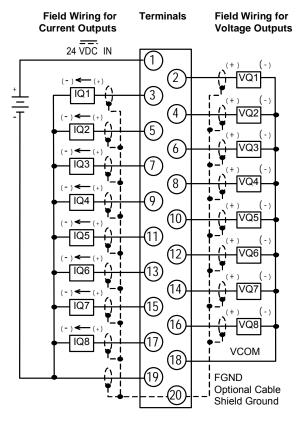

The diagram above shows connections for current and voltage outputs. Each channel can be configured to operate as a voltage output or a current output - not both simultaneously.

#### **LEDs**

The **Module OK** LED indicates module status. The **User Supply** LED indicates whether the external +24 VDC power supply is present and is above the minimum level. Both LEDs are powered from the +5 VDC backplane power bus.

LED	Indicates	
OK	ON:	Module OK and configured
		Flashing: Module OK but not configured
	OFF:	Module is defective or no +5V backplane power present
USER OK	ON:	External power supply present
	OFF:	No user power

### Installation in Hazardous Locations

- EQUIPMENT LABELED WITH REFERENCE TO CLASS I, GROUPS A, B, C & D, DIV. 2 HAZARDOUS LOCATIONS IS SUITABLE FOR USE IN CLASS I, DIVISION 2, GROUPS A, B, C, D OR NON-HAZARDOUS LOCATIONS ONLY
- WARNING EXPLOSION HAZARD SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2;
- WARNING EXPLOSION HAZARD WHEN IN HAZARDOUS LOCATIONS, TURN OFF POWER BEFORE REPLACING OR WIRING MODULES; AND
- WARNING EXPLOSION HAZARD DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NONHAZARDOUS